

OPERATION

1. Turn on the t-adapter shut-off valve to allow water to flow to the bidet sprayer head.
2. Aim the handheld bidet sprayer head at the appropriate area and press down on the trigger slowly to gradually increase the water strength from low to high.

Important Note - To prolong the life of the bidet, we highly recommend turning off the t-adapter shut-off valve after each use.

TROUBLESHOOTING

1. Water is leaking from the sprayer head or hose.

Make sure that the black rubber washers are properly installed at both ends of the hose. To create a better seal and prevent leaking, wrap the plumber's tape (included in the box), around the threads of the sprayer head and/or water supply threads before attaching it to the hose.

2. Water is leaking from the t-adapter.

Make sure that the black rubber washer is properly seated on the top connection of the t-adapter. You may wrap plumber's tape around the t-adapter and toilet tank threads to create a better seal and prevent leaking.

3. No water comes out when pressing the trigger.

Check that the t-adapter shut-off valve is turned on by turning the lever counter-clockwise so that it points to the side. If it is pointed down, then the valve is closed and water will not flow through. Also, make sure that you have turned the water supply back on after installing the bidet.

4. Water drips from the sprayer head when not in use.

It's normal for a small amount of water to drip from the spray holes, as residual water may be left inside the sprayer head after the last use (all sprayers hold a little water in the spray head after each use). However, if you feel like there is abnormal leaking from the sprayer, please contact us via the Luxe Bidet website.

For additional troubleshooting tips or FAQ, please visit our FAQ page on www.luxebidet.com.


Questions? Email us at customercare@luxebidet.com or call us at 858-360-7780.

LUXE Bidet®

NEO 95

LUXURY HANDHELD BIDET, CHROME

User Manual

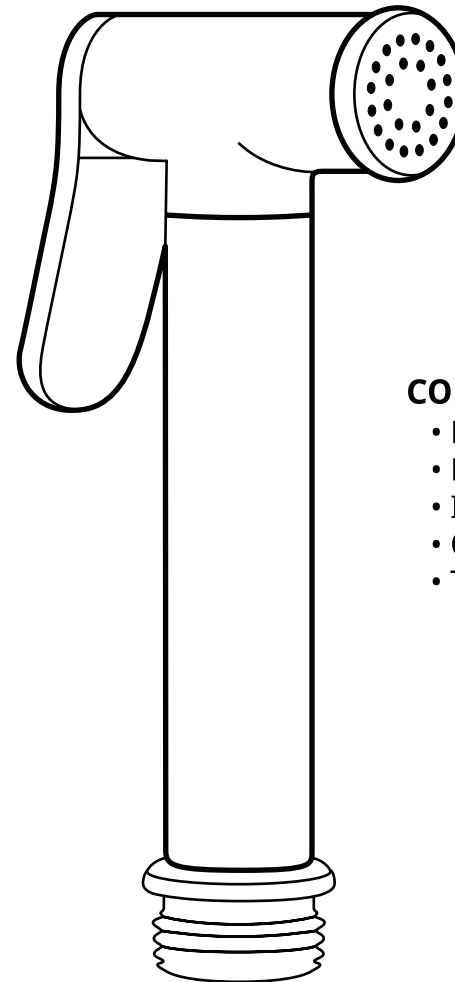

CONTENTS:

- Parts List
- Before Installation
- Installation
- Operation
- Troubleshooting

PARTS LIST



Sprayer Head



Metal Hose



T-adapter with Shut-off Valve



Sprayer Holster



Plumber's Tape, Washer

BEFORE INSTALLATION

Check that you have access to the fill valve under the toilet tank.

The provided cold water t-adapter should be installed at the fill valve under the toilet tank, NOT at the cold water supply valve coming from the wall.

Check that your toilet tank water supply line is flexible.

Check the toilet tank water supply line that connects the toilet tank fill valve to the water supply valve on the wall. If it is a rigid pipe, you will need to replace this pipe with a flexible water supply hose before installing the bidet. The length of the hose you purchase may vary, but the top connection size should be 7/8" Ballcock (to connect the provided t-adapter) and the bottom connection size should be 3/8" or 1/2" (to connect to your water supply valve).

Need assistance with installation, or have questions about the product?

We are here to help! Please don't hesitate to contact us at anytime.



Email us → customer@luxebidet.com

Chat with us → www.LuxeBidet.com

Call us → 858-360-7780

INSTALLATION

1. Turn off the toilet tank water supply and flush the toilet to empty the tank.
2. Place a towel or bucket underneath the toilet tank connection to catch any water that may spill out from the toilet tank.
3. Disconnect the toilet tank water supply hose from the toilet tank connection.
4. Connect the top connection of the t-adapter to the toilet tank. Make sure the black rubber washer is securely inserted before connecting.
Tip: Do not use excessive force while tightening the connection. Hand tighten then, if needed, use a wrench to gently tighten one quarter or a half-turn more.
Tip: Optionally, you can wrap plumber's tape (included) around the threads of the t-adapter and toilet tank fill valve to create a better seal and prevent leaking.
5. Connect the toilet tank hose to the bottom connection of the t-adapter.
6. Connect the other end of the bidet hose to the threads at the bottom of the bidet sprayer head. Make sure the black rubber washer is securely inserted (as shown in the picture) before connecting.
7. Turn the handle on the t-adapter to open the valve and allow water flow to the bidet.
8. Turn on the toilet tank water supply.
9. Mount the bidet holster on the toilet tank.

Congratulations! You have completed your Neo 95 installation. If you have any questions, feel free to contact us at customer@luxebidet.com or 858-360-7780.

